


Series 2 Advance Handset Instructions

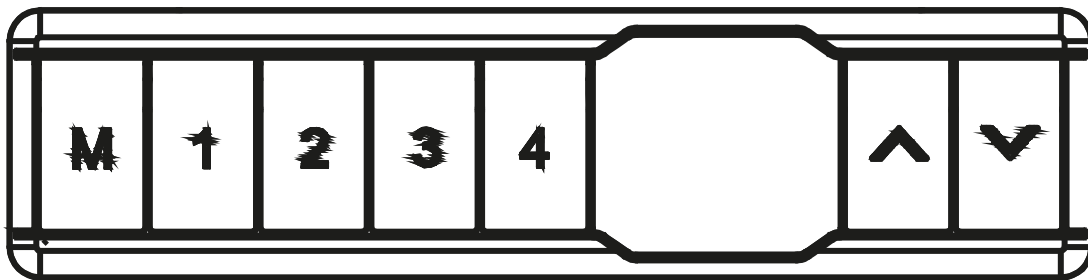

Note:

Title: Series 2 Advance Handset Instructions

Issue: 2

Issue Date: 14/06/2021


Author: EG


File Name: Series 2 Advance Handset Instructions Issue 2
14.06.2021

To view a step-by-step instruction video, please visit:

<https://vimeo.com/572986134>

or scan the code

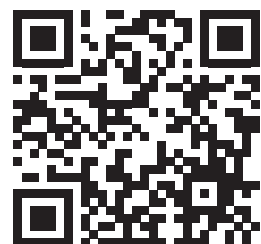

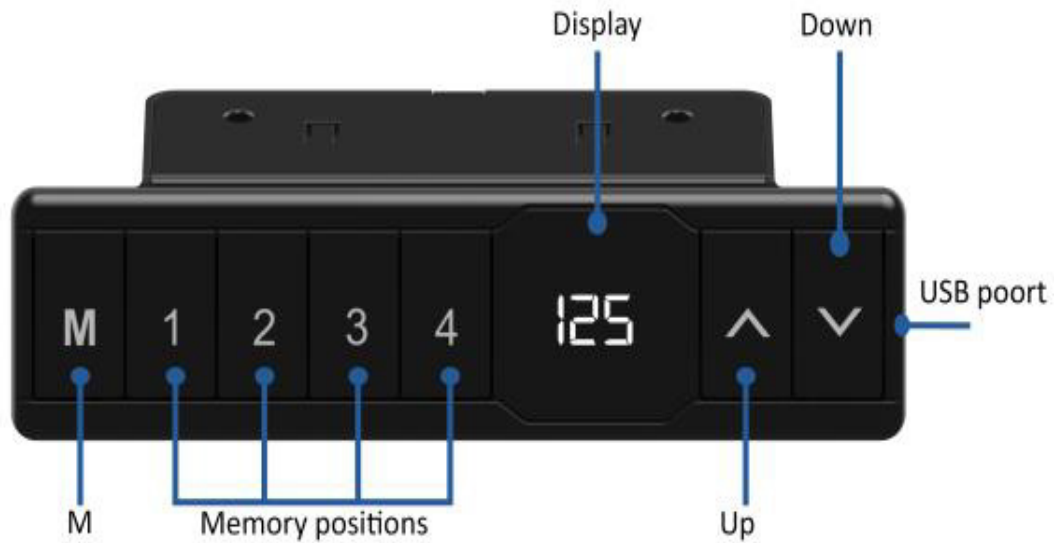

RESET OF DESK (to be done on first install and as needed after):

1. Press and hold the “Down” button until the frame has reached it's lowest position.
2. Press and hold “Down” for 5 seconds until you hear a beep.

Setting the memory function:

1. Move the desk up or down to the desired position;
2. Press “M” until the display flashes, then press “1” to save position 1;
3. Repeat the procedure to save the other positions. (4 memory positions in total).

The memory positions are not lost when the power is turned off.

Setting the minimum height of the desk:

1. Use the "Up" and "Down" buttons to move the desk-top height to the desired height you wish to set as the minimum (Lower than 97.5cm).
2. Press "Up" and "Down" at the same time for 5 seconds.
3. After completing step 2 the minimum height will have been set on the desk system. The desk will now be unable to be moved lower than this height.

Unsetting (removing) minimum height of the desk:

1. Press and hold the "Up" and "Down" buttons together for 5 seconds.

Setting the maximum height of the desk:

1. Use the "Up" and "Down" buttons to move the desk-top height to the desired height you wish to set as the maximum (higher than 97.5cm).
2. Press "Up" and "Down" at the same time for 5 seconds.
3. After completing step 2 the maximum height will have been set on the desk system. The desk will now be unable to be moved higher than this height.

Unsetting (removing) maximum height of the desk:

1. Press and hold the "Up" and "Down" buttons together for 5 seconds.

User settings:

You can choose to change the desk's default settings. In total there are 6 settings that can be changed. These are numbered in the following order S-1 to S-6.

1. You can change the settings by pressing "M" for 5 seconds. Then select which setting you want to change, using "Up" and "Down". Then press "M" again to select the selected user setting. Select the desired setting and confirm it by pressing "M".

Setting 1) CM or INCH:

1. Press "M" for 5 seconds;
2. Then "s-01" will flash on the display;
3. Press "M" again;
4. Use "Up" or "Down" to select 0 or 1; (0 = CM & 1 = INCH)
5. To save, press "M" again.

Setting 2) Adjust anti-collision sensor sensitivity:

1. 0: means off, 1: is the least sensitive and 8: is the most sensitive.

Setting 3) Sensitivity upstream anti-collision sensor:

1. 0: means off, 1: is the least sensitive and 8: is the most sensitive.

Setting 4) Sensitivity downward anti-collision sensor:

1. 0: means off, 1: is the least sensitive and 8: is the most sensitive.

Setting 5) Determine the minimum height display (standard 65cm):

1. Select the minimum height that will be shown on the display.

S6 - Determine automatic or manual operation of memory buttons:


0: Means manual placement (press and hold the button):

1: Means automatic placement to the selected height.

To view a step-by-step instruction video, please visit:

<https://vimeo.com/572986134>

or scan the code

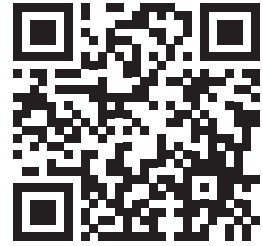

GOSTAND
SIT STAND DESKS

UK:

Email: info@gostand.co.uk

Tel: 0800 368 9668

Ireland:

Email: Info@gostand.ie

Tel: 04890767076